




ES: Escanea este código QR para ver las instrucciones actualizadas y posibles vídeos tutoriales.
EN: Scan QR code for updated manual and possible tutorial videos.
FR: Scannez ce code QR pour voir les instructions mises à jour et les vidéos possible.
IT: Scannerizzate il codice QR per vedere le istruzioni aggiornate ed eventuali tutorial video.
PT: Faça o scan deste código QR para obter instruções actualizadas e possíveis vídeos.
NL: Scan de QR code voor de actuele montagehandleiding en eventuele video met uitleg.
DE: Scannen Sie den QR-Code für die aktuelle Montageanleitung und eventuelle Video-Tutorials.

TVLD401

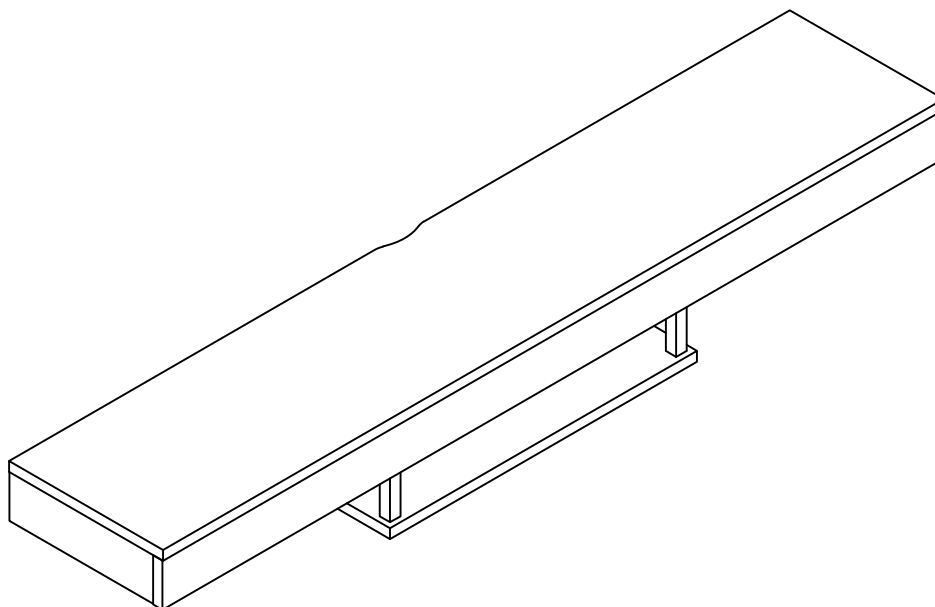



EN. The included plugs and screws are not suitable for drywall.

ES. Los tacos y tornillos incluidos no son aptos para paredes de pladur.


FR. Les chevilles et les vis fournies ne conviennent pas aux murs en placoplâtre.

IT. I tasselli e le viti in dotazione non sono adatti alle pareti in cartongesso.

PT. As buchas e os parafusos incluídos não são adequados para paredes de pladur.

NL. De meegeleverde pluggen en schroeven zijn niet geschikt voor gipswanden.

DE. Die mitgelieferten Dübel und Schrauben sind nicht für Gipswände geeignet.

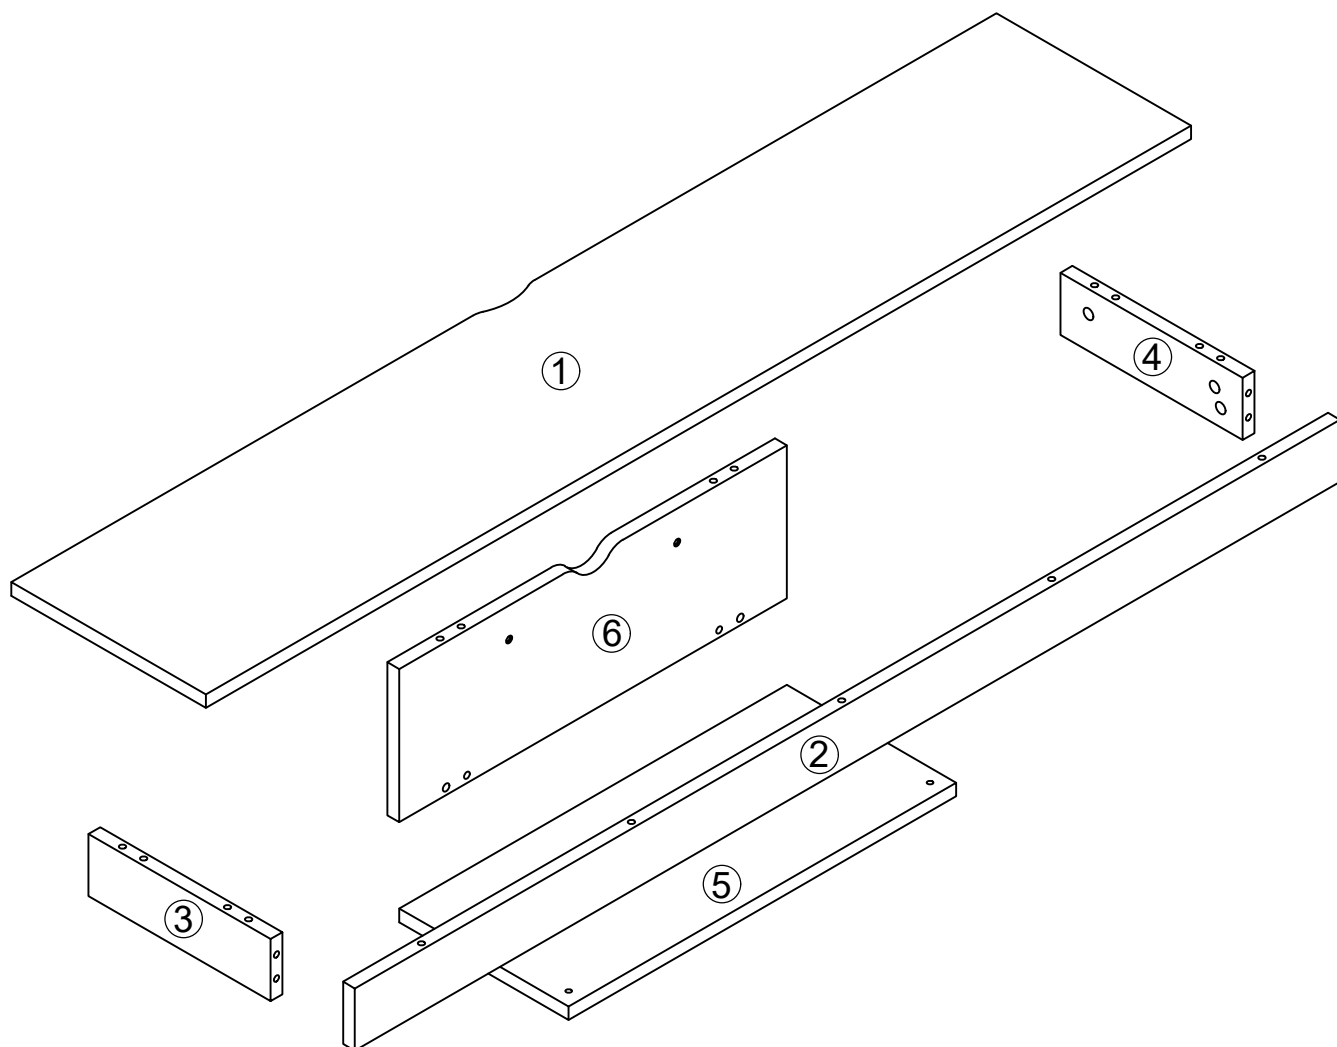

A


A1

A2

13PCS

B


8*40

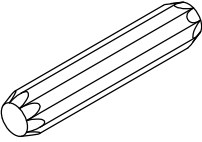

12PCS

C


6*10



12PCS

D

6*35



2PCS

E

4*50



6PCS


F

8*40




6PCS

G

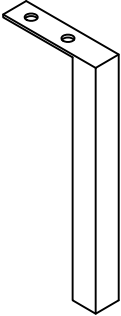


2PCS

H

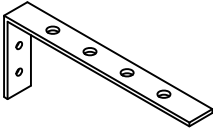



2PCS

STEP 1

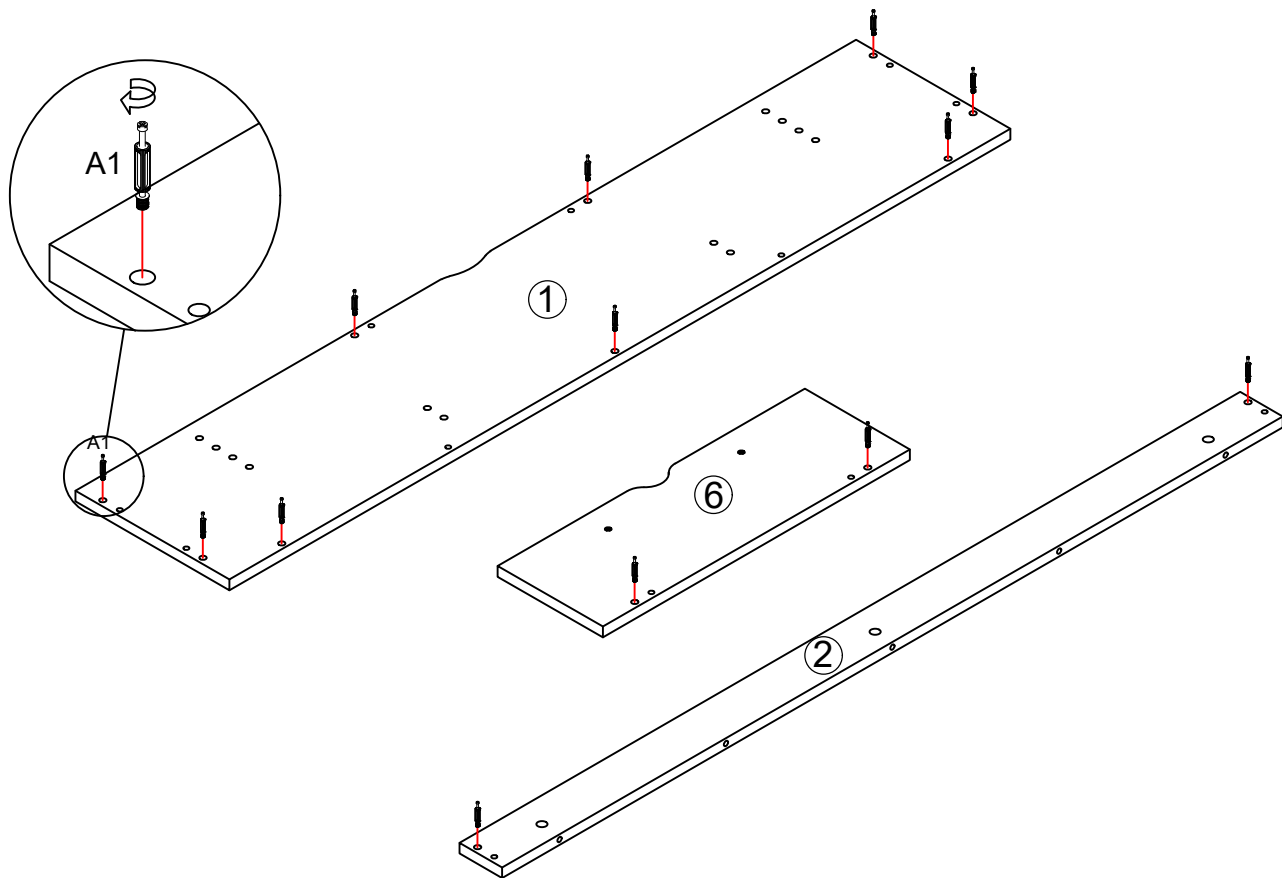

A1*13

STEP 2

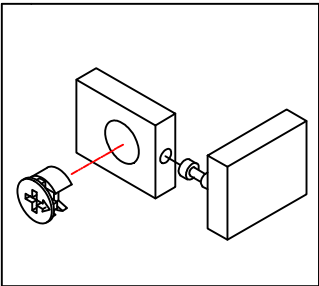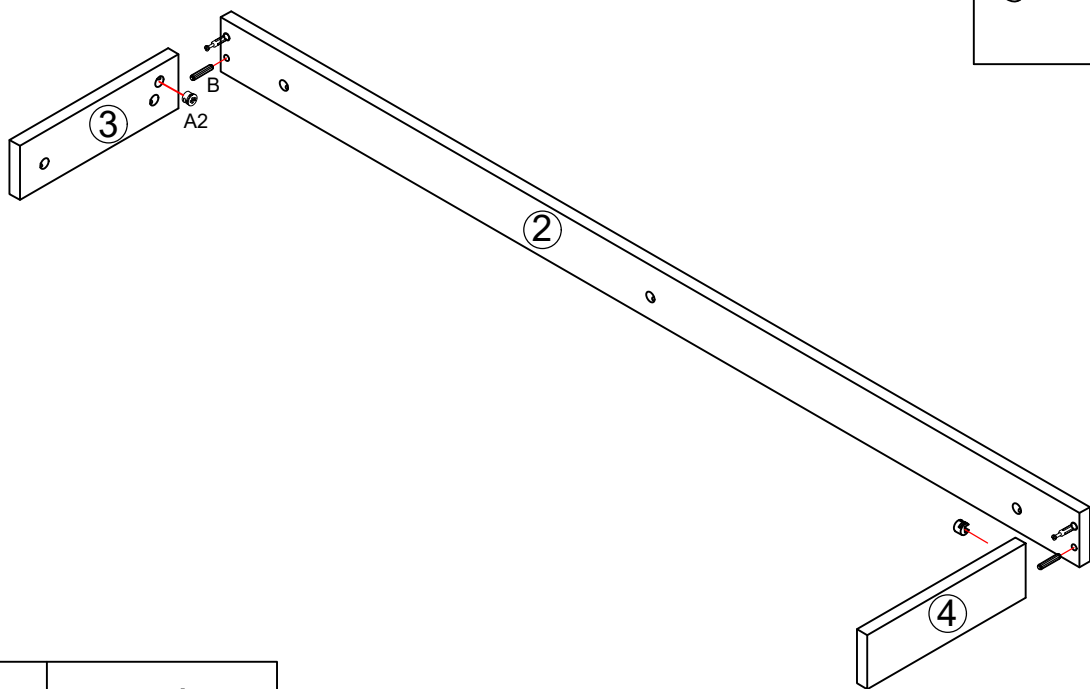


A2*2




B*2

STEP 3

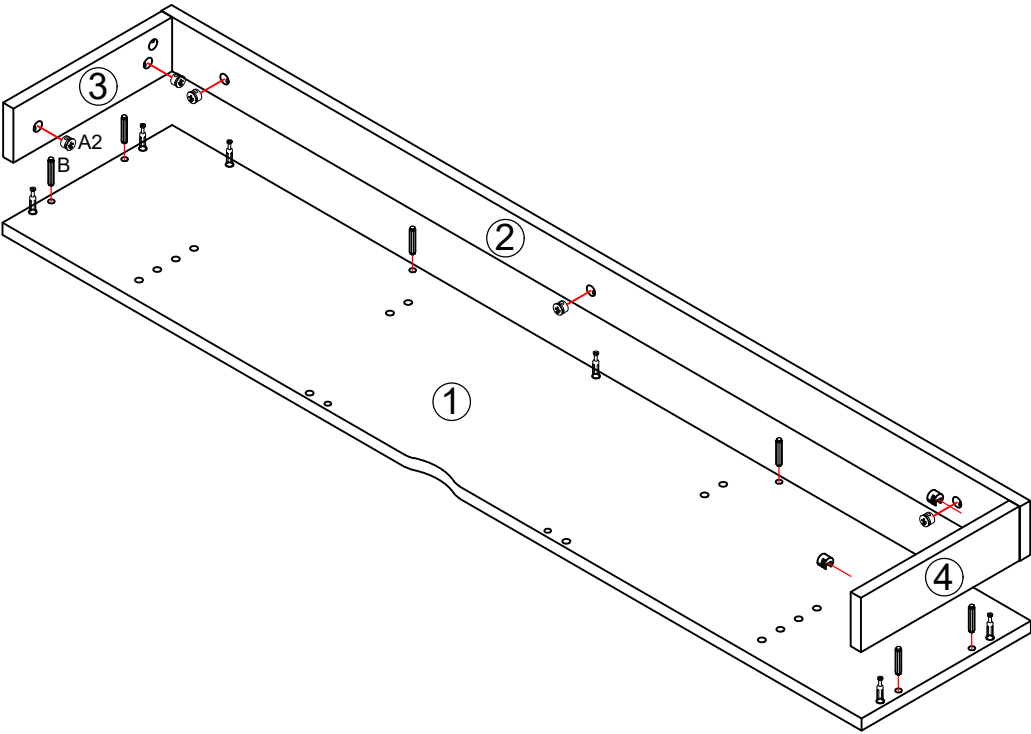


	A2*7
	B*6

STEP 4

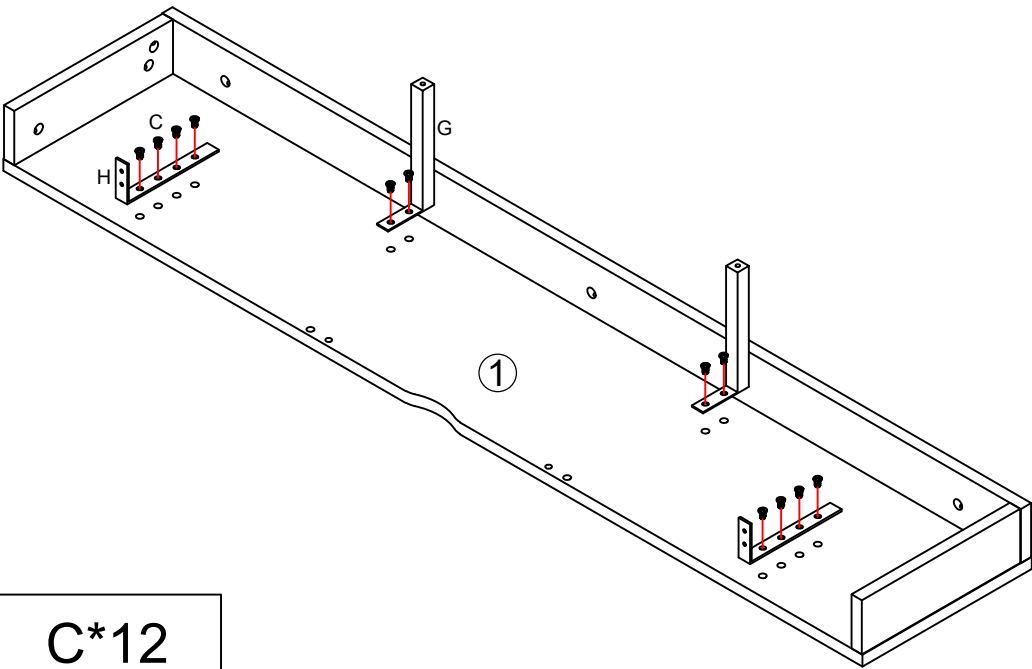


	C*12
	G*2
	H*2

STEP 5

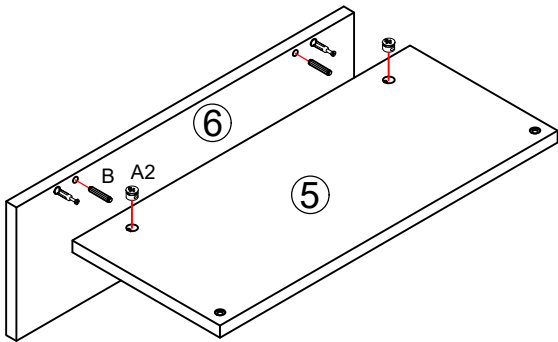


	A2*2
	B*2


STEP 6

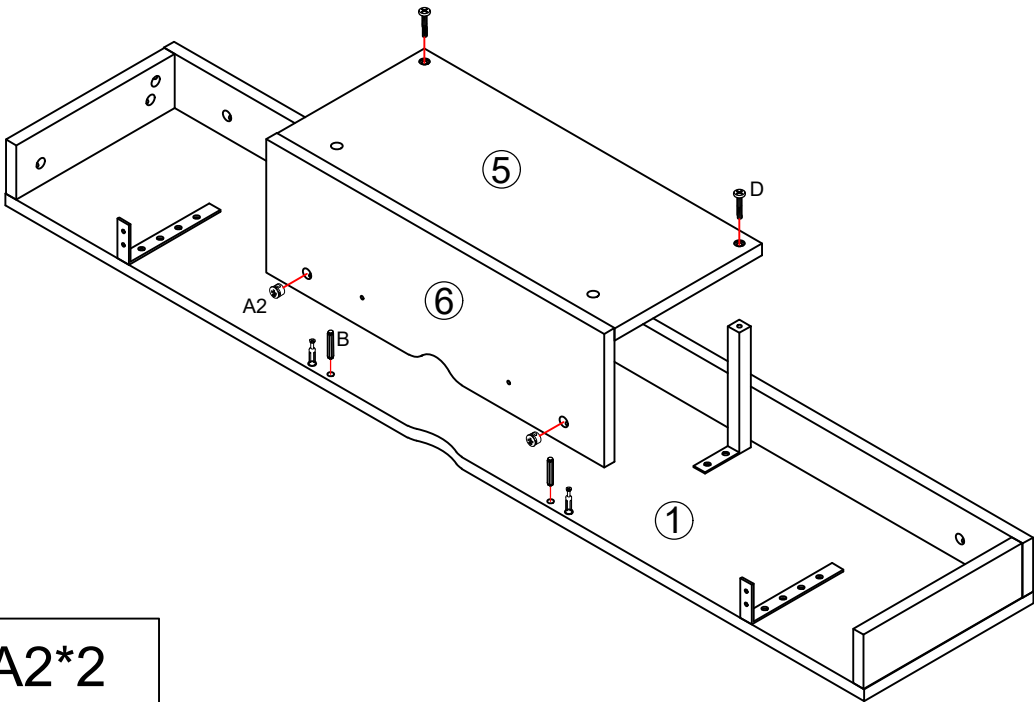

	A2*2
	B*2
	D*2

STEP 7

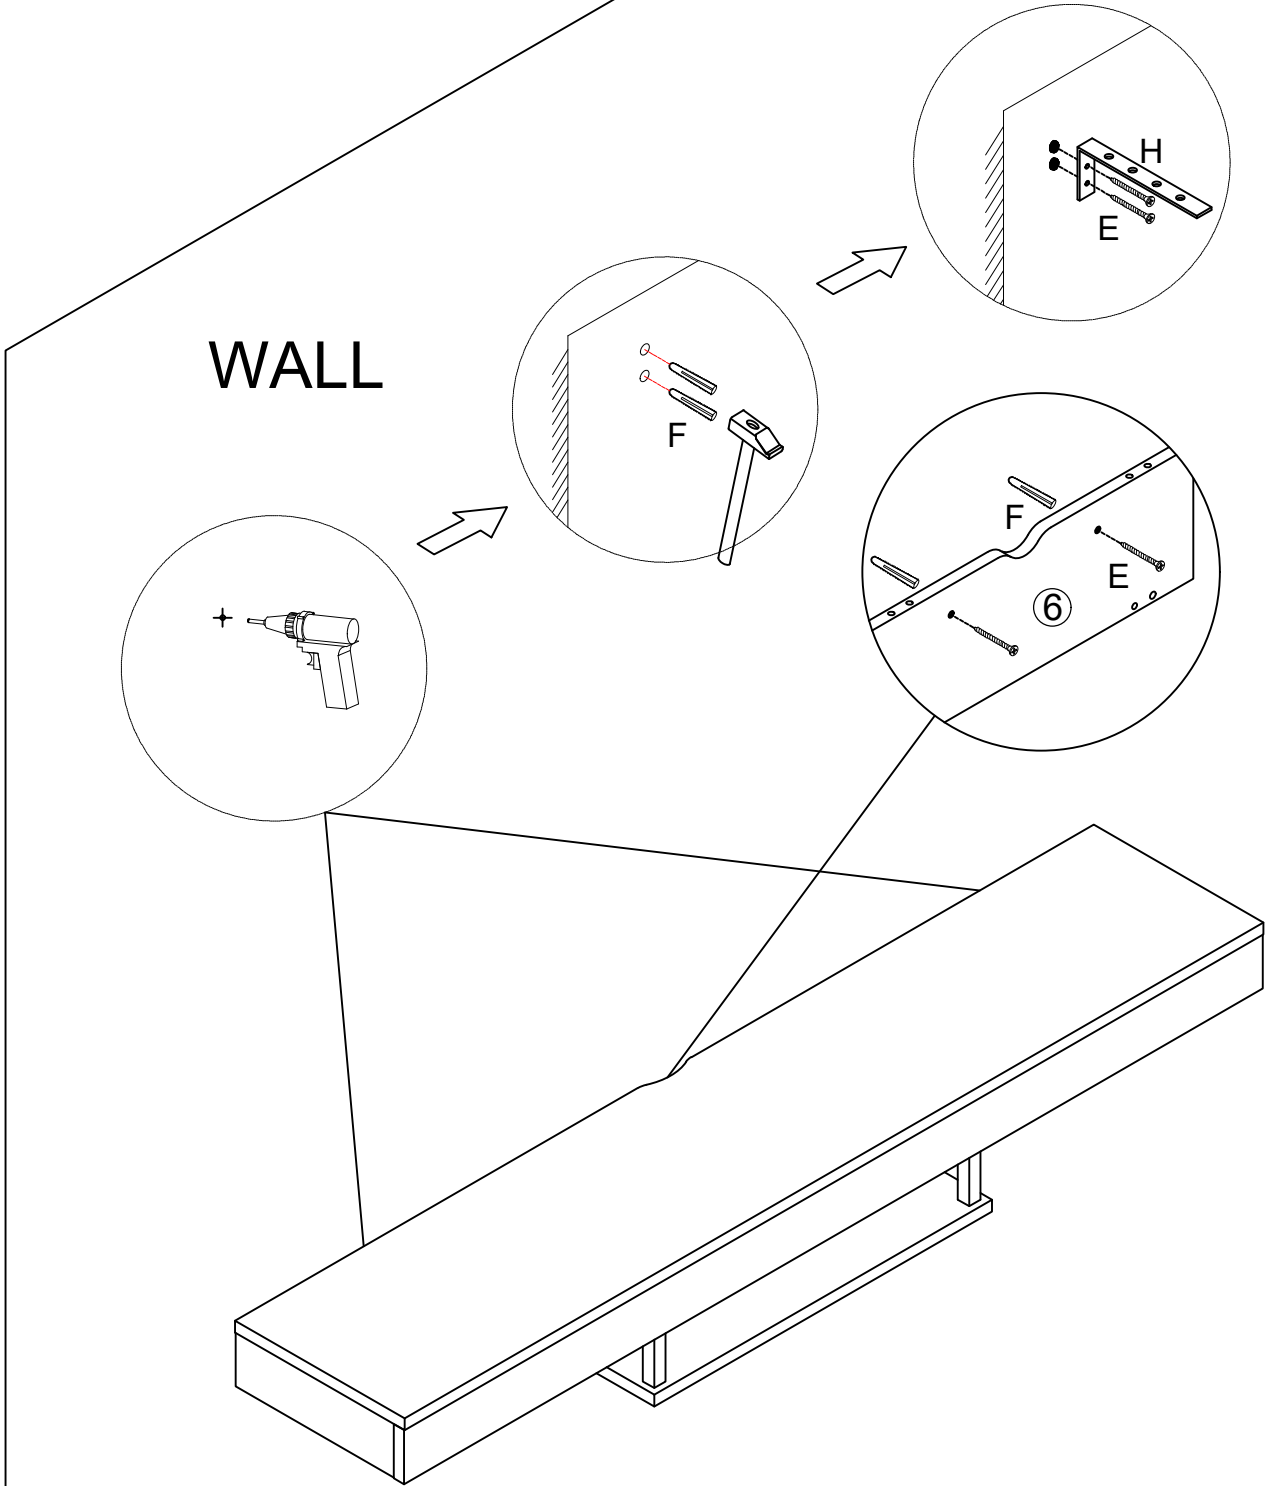

	E*6
	F*6